



Technicolor TG582n

- Establish a connection between the device and the router via network cable or Wi-Fi
- Open your web browser and type the default IP Address 192.168.1.254 in the address bar
- Click Home Network on left Menu. Then, Click Wireless Name (WLAN) on the right hand side

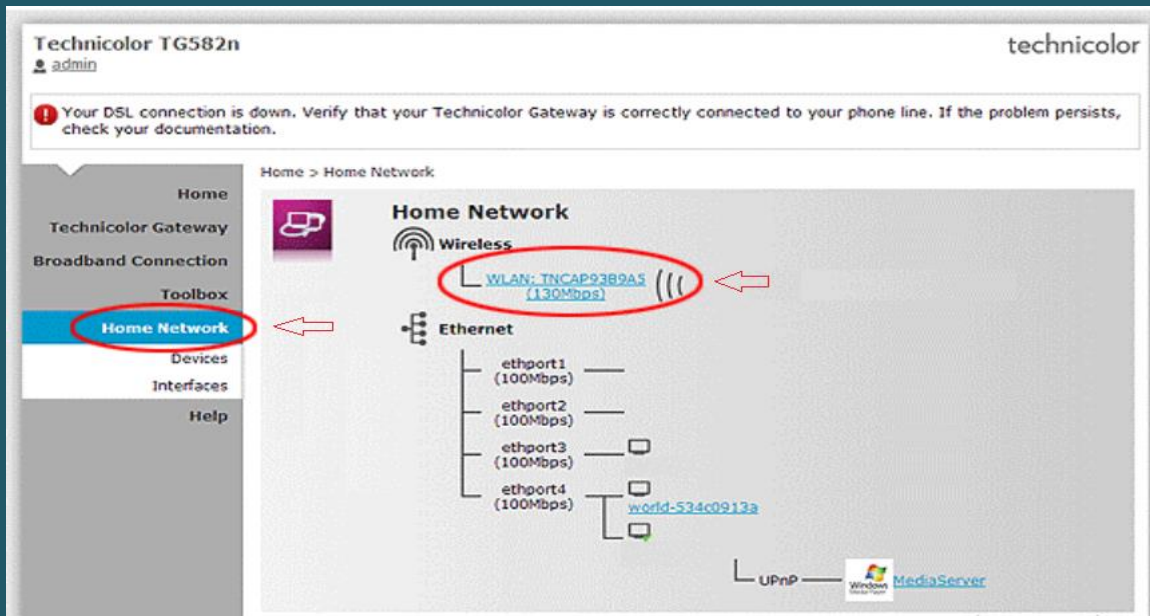

- In Wireless Access Point page click configure on the top right corner

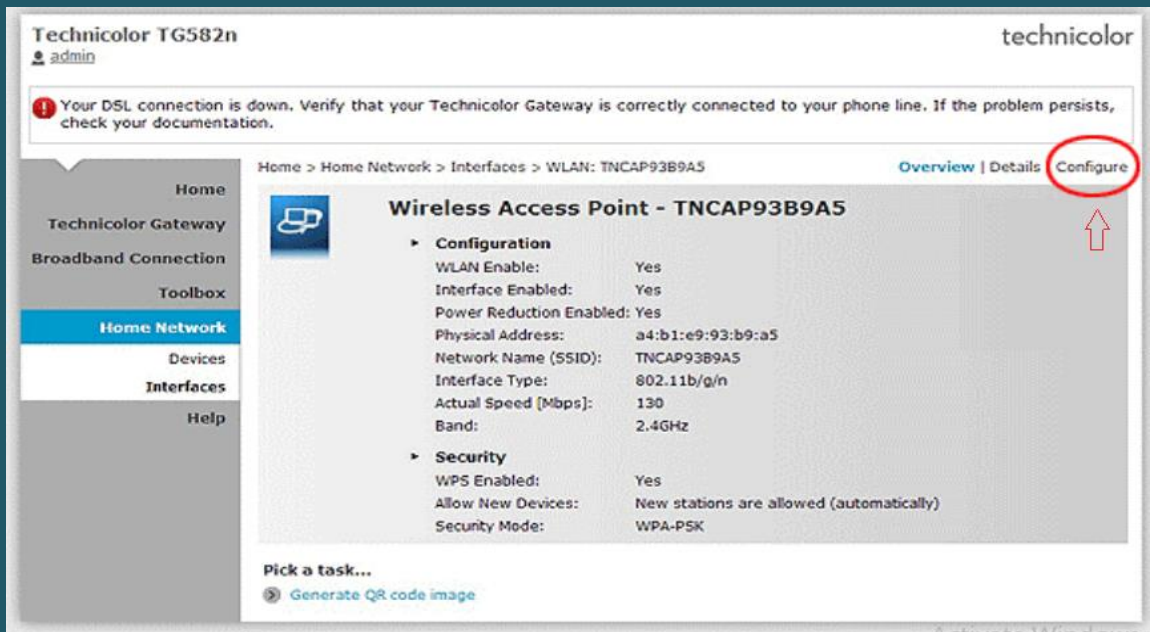

- Make sure Interface is enabled then type Wi-Fi name in Network Name (SSID)
- Scroll down to Security and choose WPA2-PSK as Security Mode
- Type wireless Password in WPA-PSK Encryption Key then click Apply to save configuration
(safest passwords are long and contain at least 8 digits of mixed letters, numbers, and symbols)

Technicolor TG582n technicolor

[admin](#)

! Your DSL connection is down. Verify that your Technicolor Gateway is correctly connected to your phone line. If the problem persists, check your documentation.

Home > Home Network > Interfaces > WLAN: TNCAP93B9A5 Overview | Details | [Configure](#)

Wireless Access Point - TNCAP93B9A5

Configuration

- WLAN Enable:
- Interface Enabled:
- Power Reduction Enabled:
- Physical Address: a4:b1:e9:93:b9:a5
- Network Name (SSID): TNCAP93B9A5
- Actual Speed [Mbps]: 130
- Band: 2.4GHz
- Channel Selection: Automatic
- Region: USA
- Channel: 6
- Allow multicast from Broadband Network:

Security

- WPS Enabled:
- Broadcast Network Name:
- Allow New Devices: New stations are allowed (automatically)
- Security Mode: WPA2-PSK
- WPA-PSK Encryption Key: *****

Pick a task...
[Generate QR code image](#)